Handheld Emergency Radio



Stay prepared with this family emergency tool

The perfect addition to any family's or individual's emergency toolkit, the Handheld Emergency Radio helps you with any number of needs you may have when disaster strikes. Its hand crank and solar panel make it easy to keep the LED flashlight, siren and radio charged up. A USB-compatible cell phone charging port is also included to make mobile communications easier. An AM/FM radio also includes weather band channels to get 24/7 emergency updates from the National Weather Service and other emergency agencies.



Features

- AM/FM Radio
- Weather Band Channels
- · Features hand crank & solar panel for supplemental charging
- Cell Phone Charging Panel via USB
- LED Flashlight
- Emergency Siren







- 1) Unscrew the battery cover on the bottom of the radio.
- 2) Insert the white tip of the rechargeable battery into the radio's connector and place the rechargeable battery in the compartment.
- 3) Reinstall the battery cover.








- 1) To recharge the batteries, make sure the radio station selector is slid to the far left.
- 2) Rotate the hand crank arm for at least a minute.



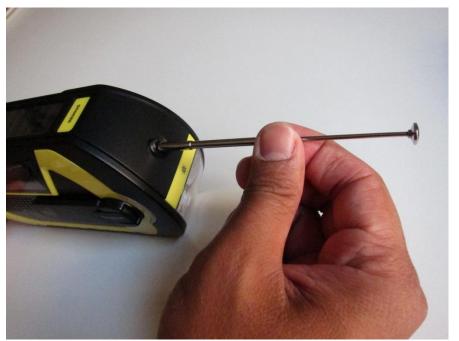



- 3) Extend the telescoping antenna to enhance radio reception.
- 4) Turn the volume knob clockwise to turn on the radio.









- 5) Slide the radio station selector to the weather band channel (1-7) that gives the clearest reception. You should hear the 24-hour weather broadcast from the National Weather Service on one of the channels.
- 6) Slide the radio station selector to the far left to activate the AM/FM radio functions.
- Use the tuning wheel to change the frequency of the AM/FM stations.



Charging a cell phone









- 1) Make sure the radio selector is slid to the far right.
- Remove the silicone cover on the back of the radio to expose the USB port.
- 3) Connect the USB cable to the USB port on the radio and to your cell phone.
- 4) Continuously rotate the hand crank arm to start charging your cell phone.